

ShorePort Parallel to Poly Dock

Step 1: Attach ShorePort to Poly Dock using poly pipe bracket / ShorePort side connector (item 4).


Step 2: Attach poly pipe bracket (item 3) to ShorePort.

Step 3: If possible use a ShorePort rear pipe bracket (item 5) to hold rear of ShorePort.

Step 4: Slide 2" schedule 40 pipe (item 6) into pipe brackets and drive into ground using post pounder.

Note: DO NOT attach ShorePort to poly dock using only poly pipe bracket / ShorePort side connector (item 4) you must also use a pipe bracket on the outside of the ShorePort (as shown).

Note: See page 10 for connector instructions.

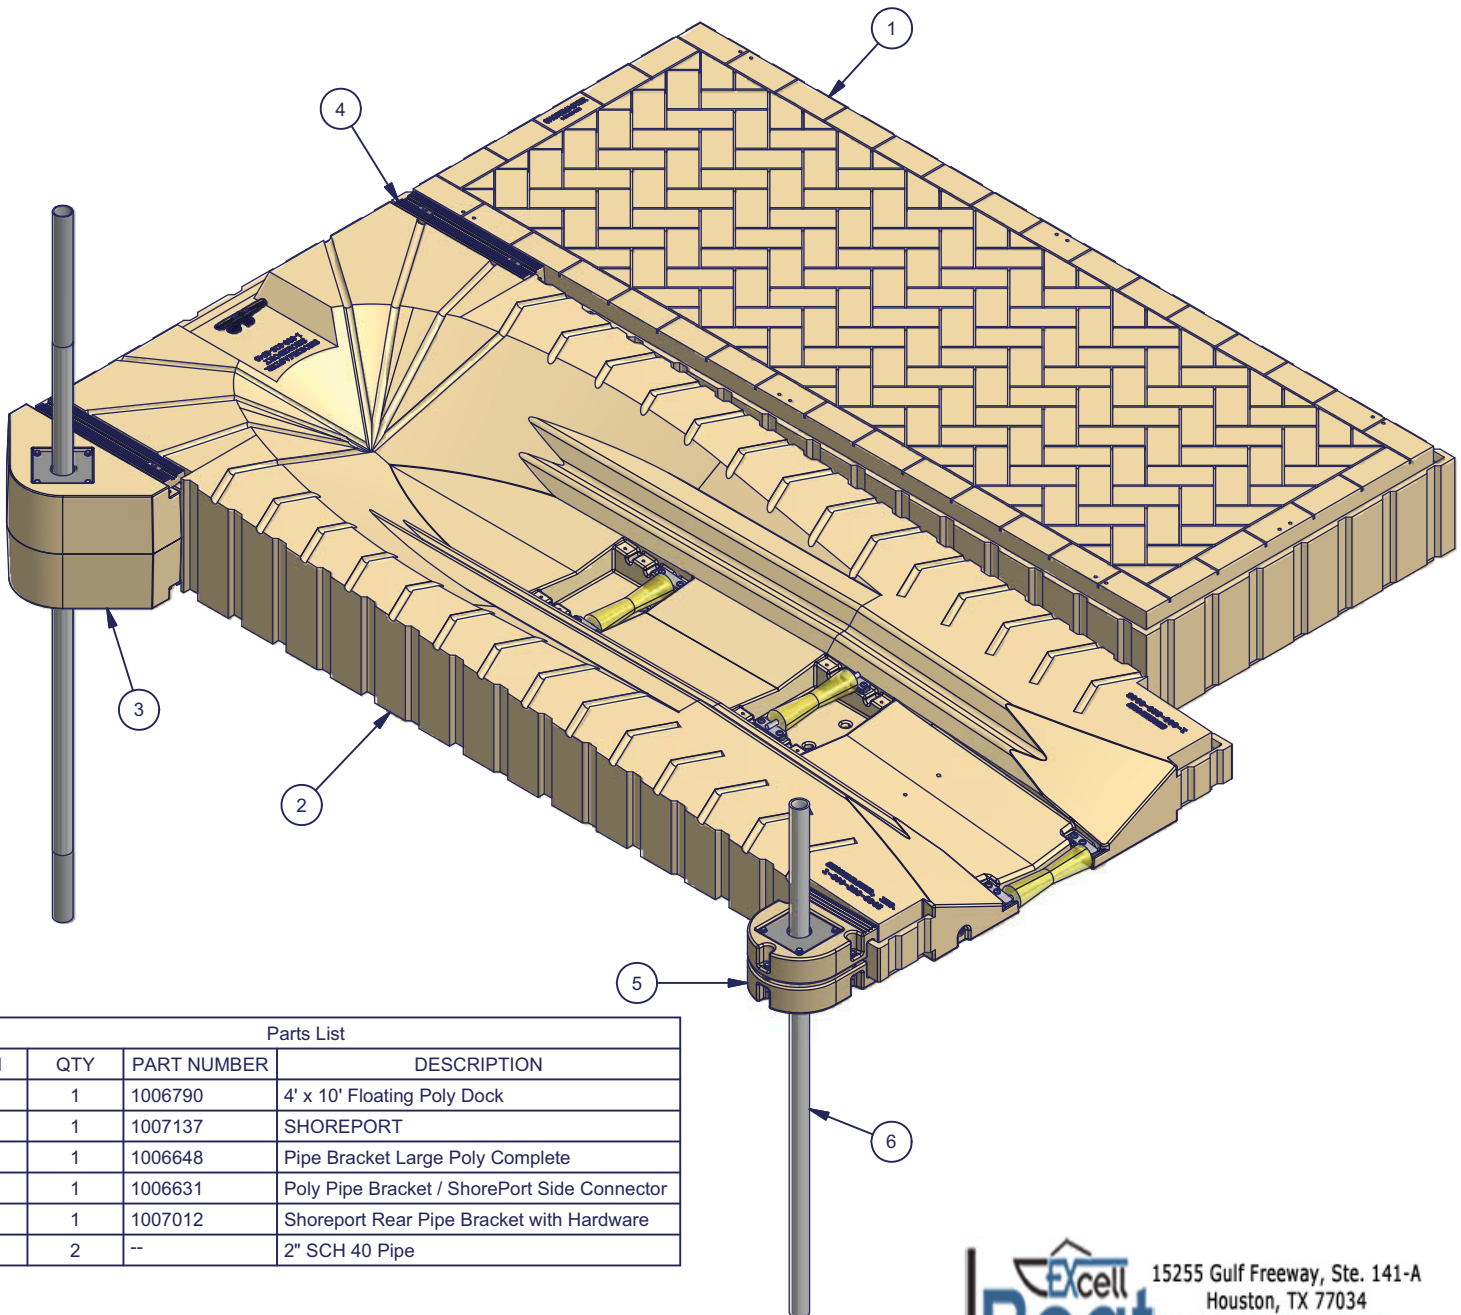

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1006790	4' x 10' Floating Poly Dock
2	1	1007137	SHOREPORT
3	1	1006648	Pipe Bracket Large Poly Complete
4	1	1006631	Poly Pipe Bracket / ShorePort Side Connector
5	1	1007012	Shoreport Rear Pipe Bracket with Hardware
6	2	--	2" SCH 40 Pipe